



Quick Start



Record Button

Press to start recording / take image.



Stop Button

Press to stop recording.



Mode Button

Use to change behavior of Record and Stop Buttons.

The default Mode is 1.

Pressing the Mode button will change the mode to the next mode, the new mode will then be indicated by the LED flashing. For example: Switching to Mode 2 will flash the LED twice.

See the Owner's Manual for a detailed description of each mode.

Scan the QR code for the owner's manual
or visit:

www.cognisys-inc.com/scout-remote

