


Camera Box Quick-Release Template

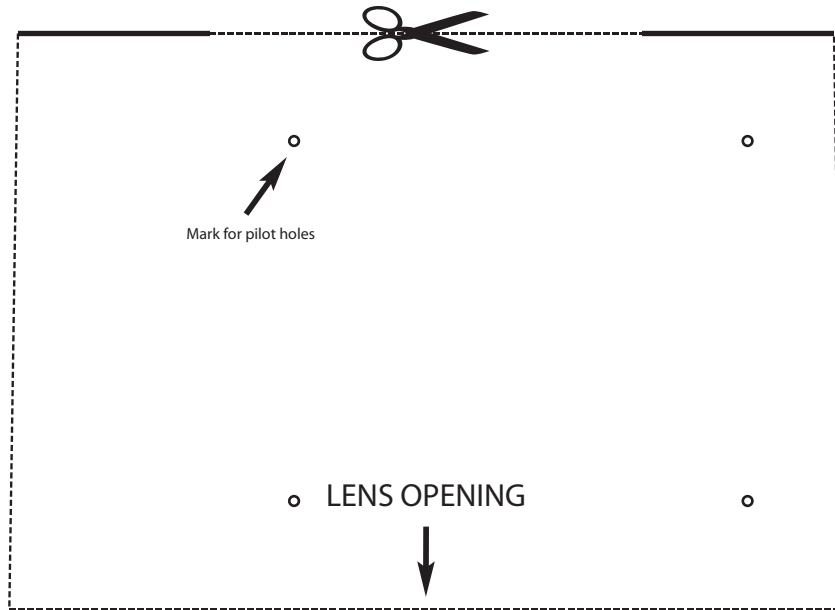

1. Cut template on dashed line shown above.
2. Remove the four 1/4-20 screws holding on the base mount of the camera box.
3. Place the template on the outside bottom of the camera box so that it fits between the two ribs and touches the two bump-outs. The template sides are angled to match the angle of the camera box.
4. Using a punch or sharp object mark the center of each hole.
5. Remove the template.
6. Drill a pilot hole ($3/32''$ / 2.5mm) for each of the four holes.
7. Increase the hole size to $13/64''$ / 5mm using another drill bit.
8. With a razor blade remove any plastic material that may compromise the screw's ability to seal to the box.
9. Insert the supplied screws through the holes (going from outside the box toward the inside) and thread into the included multi-threaded rail positioned inside the box. The screw closest to the lens opening should mate up with the first hole.

See the back-side of this for the proper mounting location.

IF PRINTING MAKE SURE SCALING IS TURNED OFF!

Top-view from inside the camera box:

