


Scout Mic/USB Passthrough Template

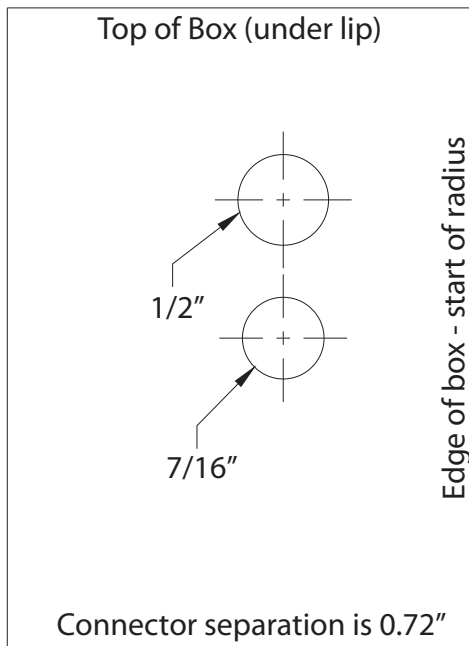

1. Print template being sure to disable any scaling or fitting.
2. Verify the distance between connectors on template is 0.72" on center to double-check that scaling was turned off.
3. Cut out template around the lines.
4. Place the template on the outside of the camera box so that it is positioned as shown on the template. It should be positioned toward the handle and up by the lid of the box.
5. Using a punch or sharp object mark the center of each hole.
6. Remove the template.
7. Drill a pilot hole (3/32" / 2.5mm) for each of the two holes.
8. Increase the hole size to the dimensions shown above.
9. With a razor blade remove any plastic material that may compromise the connectors ability to seal to the box.
10. Place the USB/Mic box through the camera box making sure both seals are on the connectors on the inside of the box.
11. Tighten the nuts but do NOT over-tighten.
12. Use "Super Glue" (cyanoacrylate) placed under the flanges of the Mic/USB housing and clamp for two minutes.
13. Attach the weatherproof caps (they do not go under the nuts).