


# Scout Microphone Passthrough Template

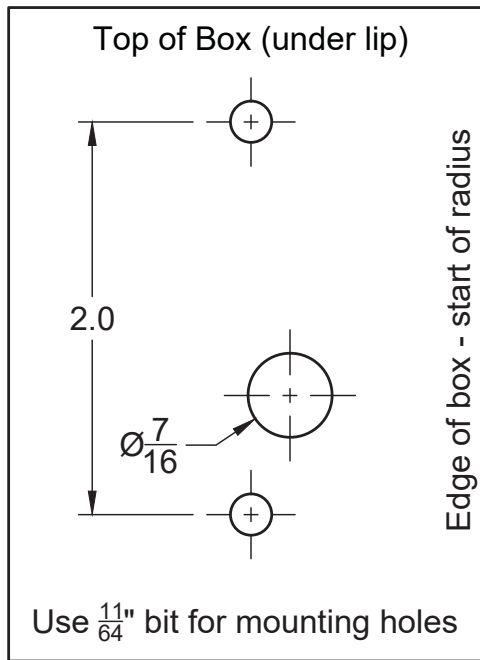

1. Print template being sure to disable any scaling or fitting.
2. Verify the distance between the mounting holes on template is 2" on the passthrough box. If not then double-check that scaling was turned off.
3. Cut out template around the lines.
4. Place the template on the outside of the camera box so that it is positioned as shown on the template. It should be positioned toward the handle and up by the lid of the box.
5. Using a scratch awl mark the center of each hole.
6. Remove the template.
7. Drill a pilot hole ( $\frac{3}{32}$ " / 2.5mm) for each of the three holes.
8. Increase the hole size to the dimensions shown above.
9. Remove any plastic material that may compromise the connectors ability to seal to the box.
10. Place the Mic box through the camera box making sure the gasket around the 4-pin connector is in place.
11. Install the screws from the outside of the camera box through the box and the Mic box mounting holes.
12. Install and tighten #8 nuts with an  $\frac{11}{32}$ " wrench until the sealing washers are compressed.
12. Tighten the exterior connector nut - do NOT over-tighten.
13. Attach the weatherproof cap (it does not go under the nut).